



Herb and Salad Chopper Care and Use Instructions

To Activate Blades:

closed




Pull tab straight out

partially open



While holding tab swing blade down towards other side of housing

open & locked

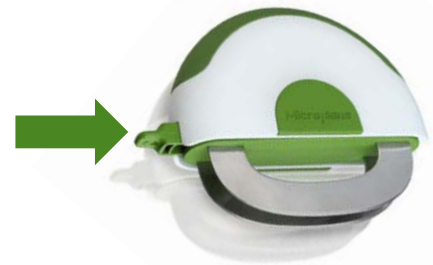

Once blades are fully revealed push in tab to lock blades in place

- Reverse the process to close the blade
- Clean with the blades exposed or facing out
- Dishwasher safe
- Store with blades inside housing for safety

CAUTION

Sharp Blades! Keep fingers clear of blades when in use.

Attention! Lames tranchantes.
Prendre des précautions en enlevant les lames pour le nettoyage et pendant l'utilisation.



To Use:

- Place herbs or greens on cutting board
- Rock the herb and salad chopper back and forth until desired results are achieved.

